

# ROVR | Adapter Cable Install Guide

Follow the steps below to easily install ROVR in your vehicle using an adapter cable.

## Step 1



Secure your ROVR to the end of the [adapter cable](#). You will have a 9 pin or 6 pin adapter cable.



## Step 2



Connect the cable to the [vehicle port](#) and start the engine.

You will notice a red blinking light on the side of the device. This means your ROVR is powered and operational.

